

AP25 Flush Mount Sleeve Installation Guide

Package Contents

- Plastic AP25 flush mount sleeve (R9B36A)
- AP25 Flush Mount Sleeve Installation Guide

Introduction

The AP25 flush mount sleeve lines up the exterior of the access point, offering a practical and aesthetic solution for concealment and customization.

Installation




You may want to install the wall/ceiling mount bracket prior to installing the AP25 flush mount sleeve.

Installing the Sleeve onto the Access Point

1. Fit the bottom corners of the AP25 flush mount sleeve around the access point, then press the sleeve onto the access point until it clicks into place. See Figure 1.

Figure 1 Attaching sleeve onto access point

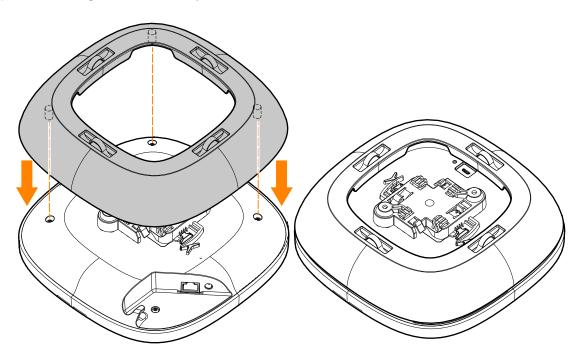

Installing the Access Point (with Sleeve) to a Ceiling Rail

- 1. Hold the access point next to the ceiling rail with the mounting tabs of the mount bracket at approximately a 30-degree angle to the ceiling rail.
- 2. Pushing toward the ceiling rail, rotate the access point clockwise until the access point clicks into place on the ceiling rail. See Figure 2.















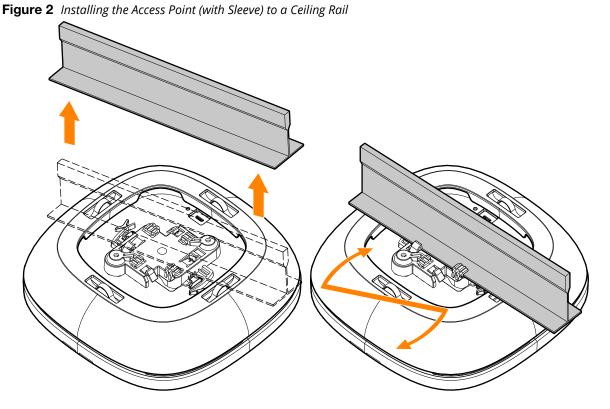

Removing the Access Point (with Sleeve) from a Ceiling Rail

- 1. Turn the access point (with sleeve) by hand counter-clockwise until the mounting tabs of the mount kit disengage from the ceiling rail. See Figure 3.
- 2. After the access point (with sleeve) is removed from the ceiling rail, pull the sleeve off from the access point by hand.

Figure 3 Removing the Access Point (with Sleeve) from a Ceiling Rail

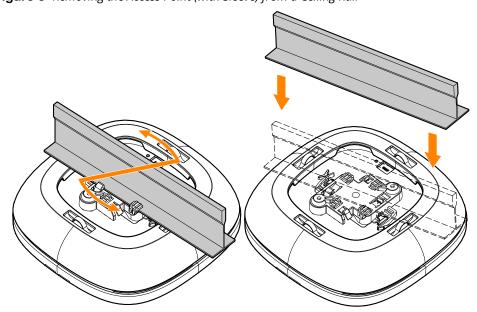

Installing the Access Point (with Sleeve) to a Wall


- 1. Install the mount bracket to the wall as per the installation instructions provided with the wall anchors.
- 2. Align the access point (with sleeve) with the mount bracket, placing the access point so that it's mounting tabs are at an angle of approximately 30 degrees to the mount bracket.
- 3. Pushing towards the wall, rotate the access point (with sleeve) clockwise until it clicks into place. See Figure 4.







Figure 4 Installing the Access Point (with Sleeve) to a Wall

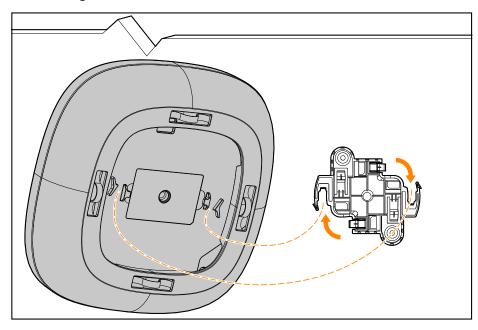

Removing the Access Point (with Sleeve) from a Wall

- 1. Turn the access point (with sleeve) by hand counter-clockwise until the mounting tabs of the access point disengage from the mount bracket on the wall. See Figure 5.
- 2. After the access point (with sleeve) is removed from the wall, pull the sleeve off from the access point by hand.

Figure 5 Removing the Access Point (with Sleeve) from a Wall

